



<http://www.strandhardware.co.uk/Docs/DoP/SHW002.pdf>



https://www.strandhardware.co.uk/images/UKCA-DOPs/UKCA_Emergency_Exit_Devices_SWHUKCA2.pdf



CE	UK CA	STRAND HARDWARE LIMITED
		Strand House Long St Premier Business Park Walsall West Midlands WS2 9DY ENGLAND
0425-1579-11	0843-1038	
EN179: 2008		3-7-7-B-1-4-4-2-B-A



The safety features of this exit device are of fundamental importance to ensure its compliance with standard EN179. No modifications of any kind to the device other than those described in the fitting instructions are permitted.
 This panic device may be fitted to fire or smoke door assemblies.
 Attention: Exit devices shall not include dogging (hold unlocked) when fitted to fire or smoke door assemblies - dogging can only be used on escape doors.

Component	Qty
GR1	1
V1	4
V2	2
V3	2

IMPORTANT:
 Before the fitting of Outside Access Device (OAD) onto a door it is important to establish the correct position of the centre mechanism and appropriate striker.

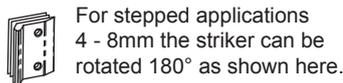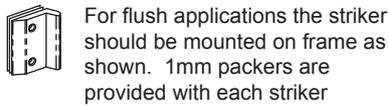

For recessed situations the PH4303 should be turned 90 degrees to door face as shown - see page 4 (striker applications)

Measurement **Z** varies depending on recessed, flush or stepped applications.


This measurement should be established before holes are drilled into door section

Fix the centre mechanism onto door at appropriate height - push pad should be positioned between 900 - 1100mm from FFL ensuring good contact with centre striker.

HANDING of MECHANISM



To change the hand remove screws **V3**. Remove bracket **E** and securing plate **D**

Rotate crossarm bracket upwards as shown in illustration

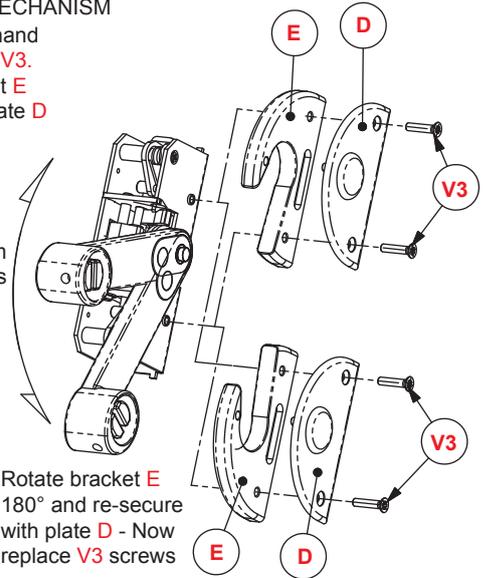

Position flat plate **F1** beneath mechanism as shown. If used in conjunction with an OAD use **F2** plate with integral cam - this plate is supplied with all outside access devices (ensure cam is positioned as shown)

FIXING PLATES F*

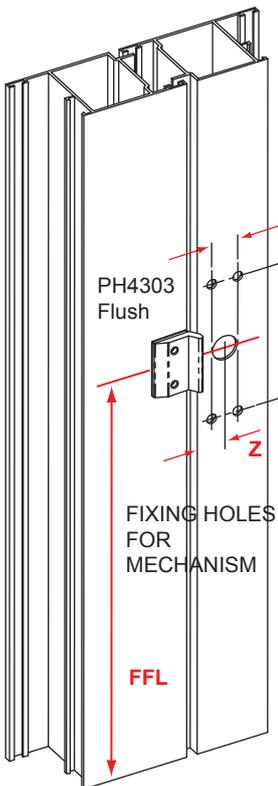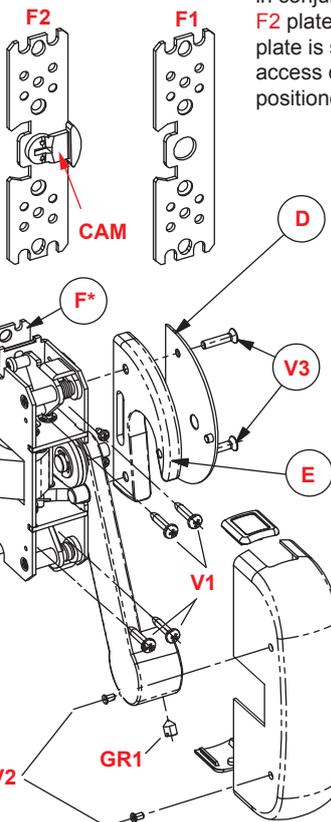

Push Pad Insert
 After fitting cover onto centre mechanism, the pad can be inserted into support bracket and grub screw **GR1** can be fully tightened. The photoluminescent insert can now be placed onto pad as shown





<http://www.strandhardware.co.uk/Docs/DoP/SHW002.pdf>



https://www.strandhardware.co.uk/images/UKCA-DOPs/UKCA_Emergency_Exit_Devices_UKCA_SWHUKCA2_12_9_22.pdf

CE	UK CA	STRAND HARDWARE LIMITED
		Strand House Long St Premier Business Park Walsall West Midlands WS2 9DY ENGLAND
0425-1579-11	0843-1038	
EN179: 2008		3-7-7-B-1-4-4-2-B-A



The safety features of this exit device are of fundamental importance to ensure its compliance with standard EN179. No modifications of any kind to the device other than those described in the fitting instructions are permitted.
 This panic device may be fitted to fire or smoke door assemblies.
 Attention: Exit devices shall not include dogging (hold unlocked) when fitted to fire or smoke door assemblies - dogging can only be used on escape doors.

Fix the centre mechanism onto door section at appropriate height (push pad should be positioned between 900 - 1100mm from FFL) ensuring good contact with centre striker.

Fix top and bottom pullmans ensuring good contact with top and bottom strikers.

Cut threaded rods to size (X + 25mm & Y + 25mm)

Insert threaded rod B into connector A with lock-nuts C as shown.

Push RG rubber grommets over thread (2 per rod)

Insert threaded rod into riv-nut D of pullman latch and rotate.

Push connector A over bush of centre mechanism as shown.

Insert M4 screws E to secure connector in place


After final adjustments of rods are made, secure all lock-nuts making sure that all of the connections are tight.

Care should be taken to ensure any lost motion is prevented by adjustment of threaded rods and lock-nuts.


Length of threaded rods:
 X + 25mm
 Y + 25mm

Length of rod covers:
 X - 1.5mm
 Y - 1.5mm


Floor strikers should be mounted on floor as shown. If aluminium low threshold strips are used the striker should be notched into aluminium section to comply with current legislation.

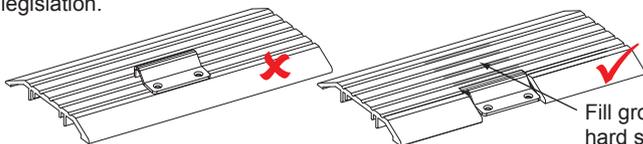

Fill grooves and voids in aluminium with hard sealant to prevent "pre-latching"

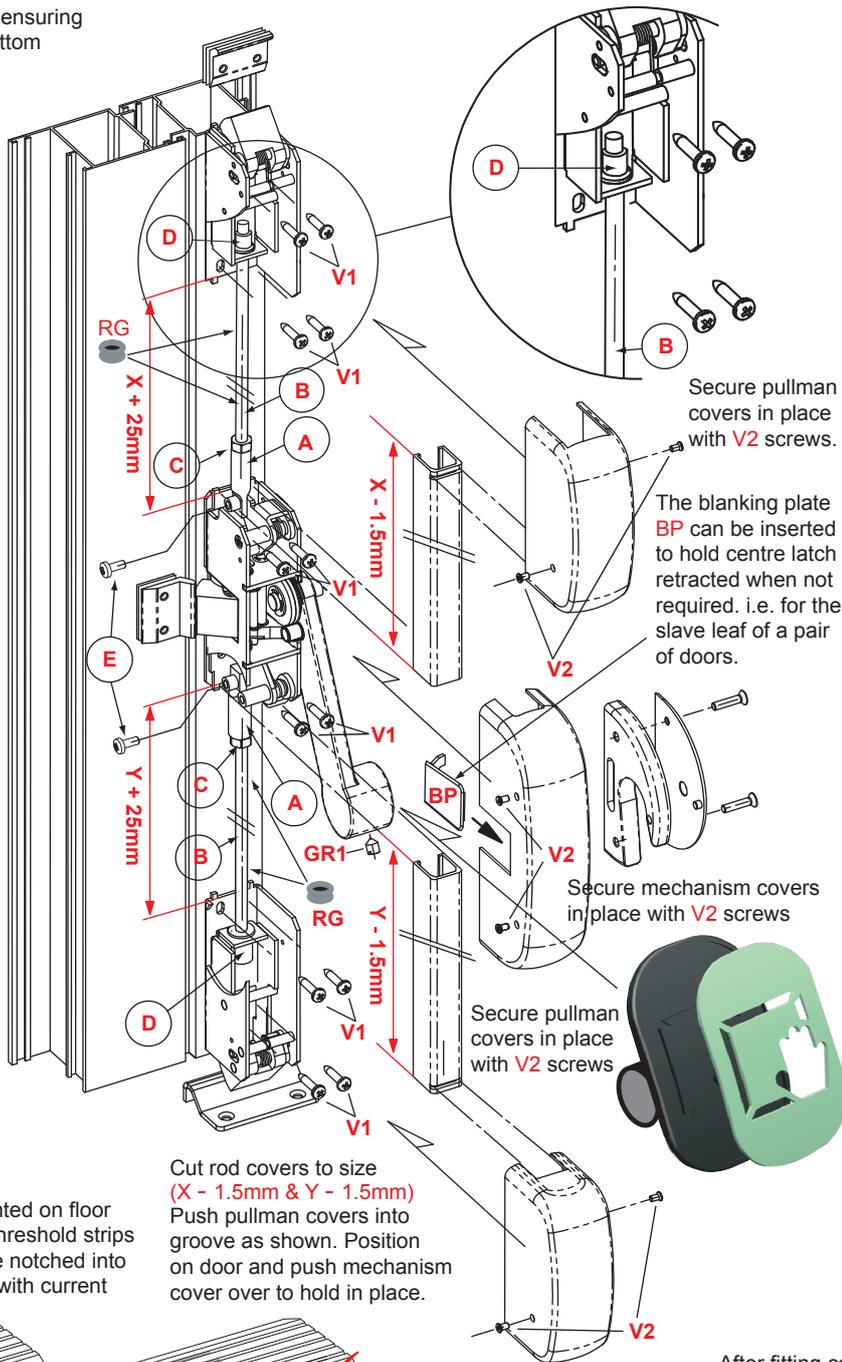

IMPORTANT: Before the fitting of an Outside Access Device onto a door it is important to establish the correct position of the centre mechanism and appropriate strikers.

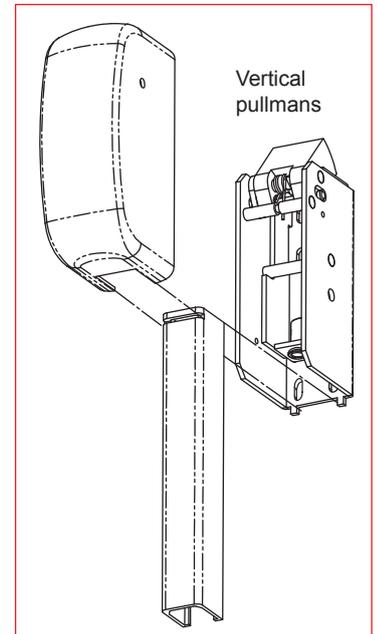

Ensure rubber washers RG are pushed over threaded rods to prevent any vibration or rattle.

Component	Qty
V1	12
V2	6
A	2
C	2
E	2
BP	1
RG	4

After fitting cover onto centre mechanism, the pad can be inserted into support bracket and grub screw GR1 can be fully tightened. The photoluminescent insert can now be placed onto pad as shown.



<http://www.strandhardware.co.uk/Docs/DoP/SHW002.pdf>



https://www.strandhardware.co.uk/images/UKCA-DOPs/UKCA_Emergency_Exit_Devices_UKCA_SWHUKCA2_12_9_22.pdf

CE	UK CA	STRAND HARDWARE LIMITED
		Strand House Long St Premier Business Park Walsall West Midlands WS2 9DY ENGLAND
0425-1579-11	0843-1038	
EN179: 2008		3-7-7-B-1-4-4-2-B-A



The safety features of this exit device are of fundamental importance to ensure its compliance with standard EN179. No modifications of any kind to the device other than those described in the fitting instructions are permitted.

This panic device may be fitted to fire or smoke door assemblies.

Attention: Exit devices shall not include dogging (hold unlocked) when fitted to fire or smoke door assemblies - dogging can only be used on escape doors.

Fix the centre mechanism onto door section at appropriate height (push pad should be positioned between 900 - 1100mm from FFL) ensuring good contact with centre striker.

Fix top and bottom pullmans ensuring good contact with top and bottom strikers.

Cut threaded rods to size (X + 15mm & Y + 15mm)

Insert threaded rod B into connector A with lock-nuts C as shown.

Push RG rubber grommets over thread (2 per rod)

Insert threaded rod into riv-nut D of pullman latch and rotate.

Push connector A over bush of centre mechanism as shown.

Insert M4 screws E to secure connector in place

After final adjustments of rods are made, secure all lock-nuts making sure that all of the connections are tight.


Care should be taken to ensure any lost motion is prevented by adjustment of threaded rods and lock-nuts.

Length of threaded rods:

X + 15mm
Y + 15mm

Length of rod covers:


X - 1.5mm
Y - 1.5mm

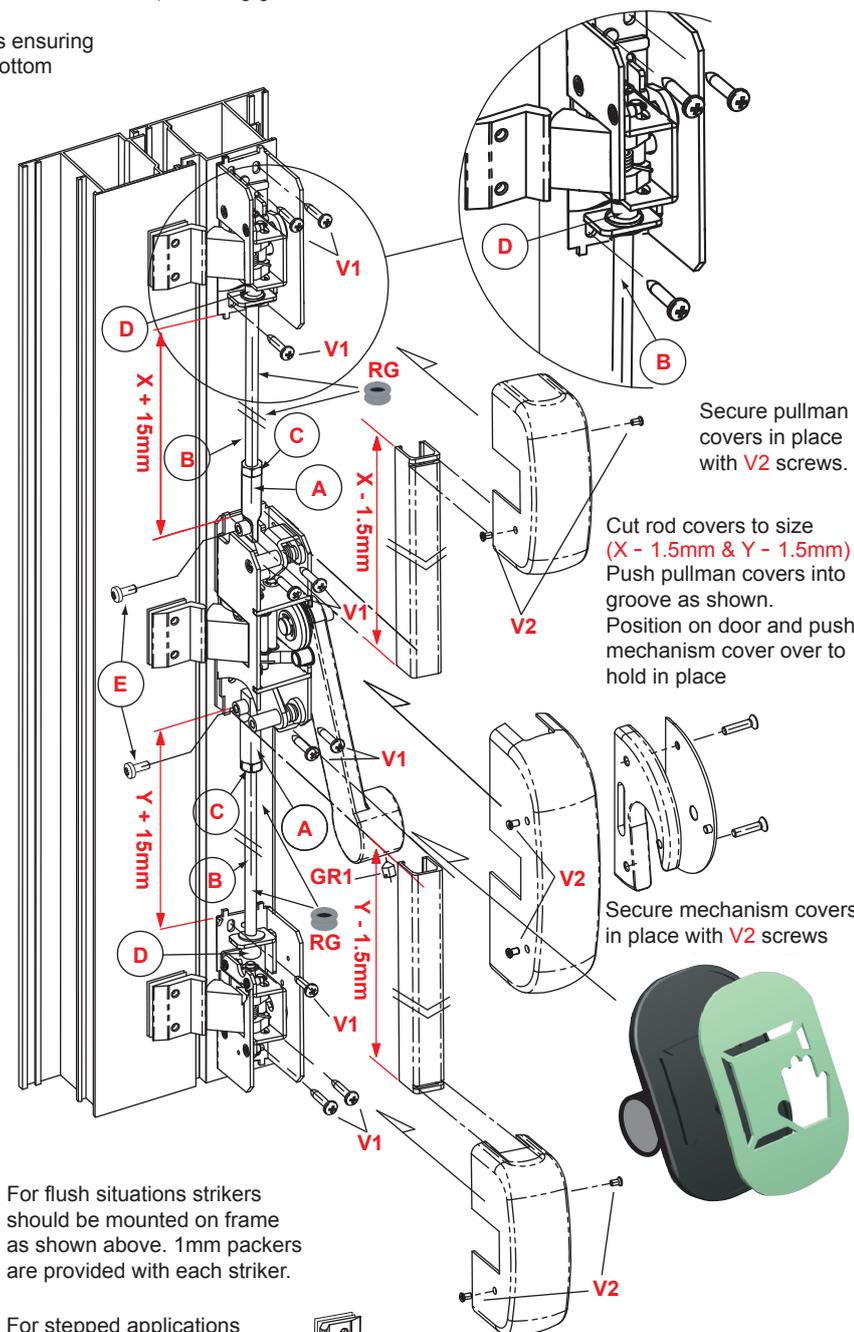

For flush situations strikers should be mounted on frame as shown above. 1mm packers are provided with each striker.

For stepped applications 4 - 8mm the striker can be rotated 180° as shown here. Also see striker applications on page 4 for typical applications.

IMPORTANT: Before the fitting of an Outside Access Device onto a door it is important to establish the correct position of the centre mechanism and appropriate strikers.

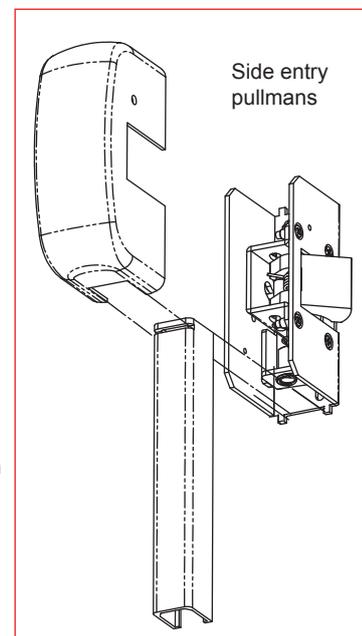


Ensure rubber washers RG are pushed over threaded rods to prevent any vibration or rattle.

Component	Qty
V1	10
V2	6
A	2
C	2
E	2
BP	1
RG	4


After fitting cover onto centre mechanism, the pad can be inserted into support bracket and grub screw GR1 can be fully tightened. The photoluminescent insert can now be placed onto pad as shown.

Drawings are for guidance only


PH4303
Timber - Recessed

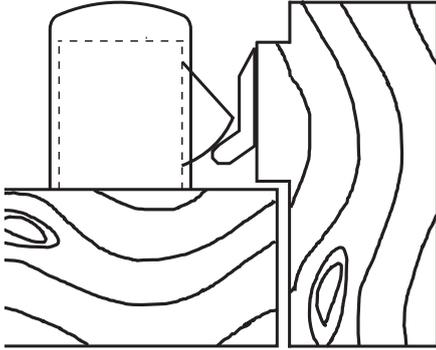


PH4303
Timber - Flush

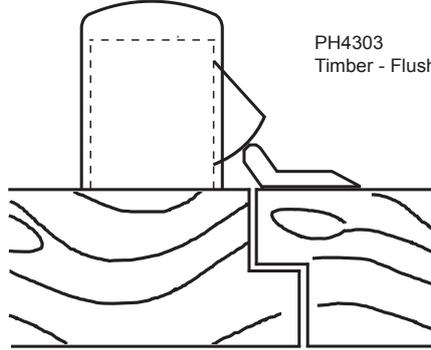


PH4300
Steel - Flush

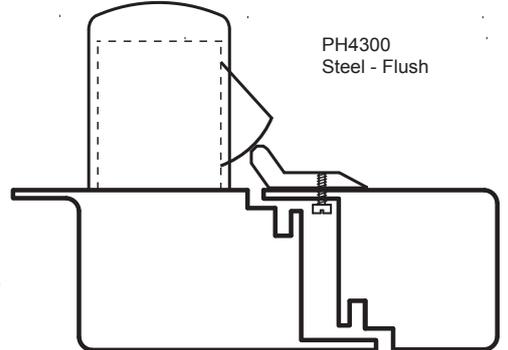


PH4300
Aluminium - Stepped

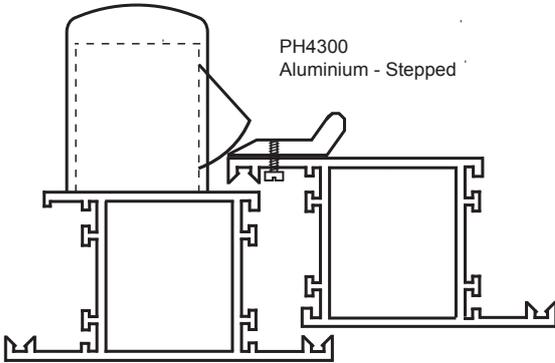

EX9310
PVC-U

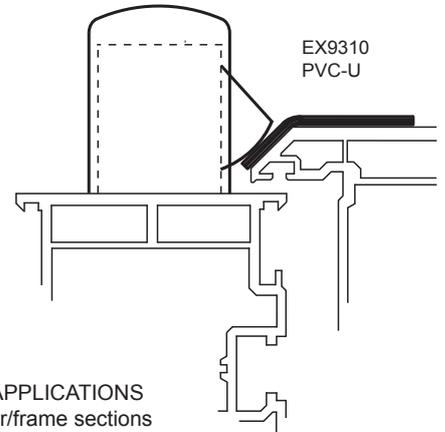



PH4300
Aluminium - Flush

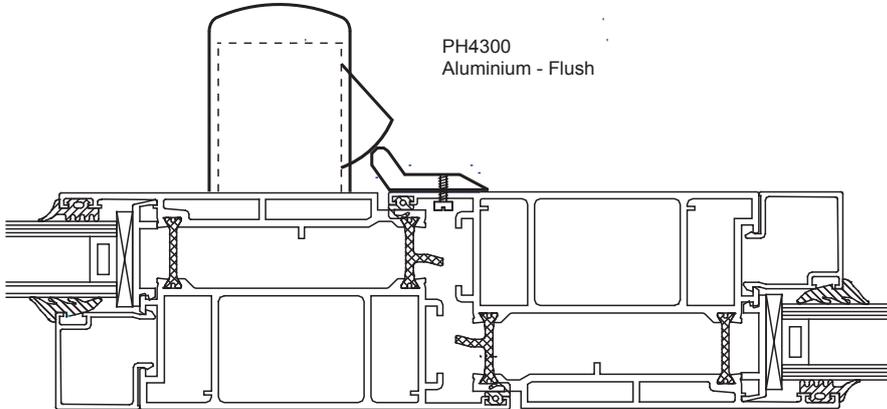

STRIKER APPLICATIONS
Typical door/frame sections
showing correct use of strikers

A range of PVC-U profile related
strikers is also available

Floor strikers should be mounted
on floor as shown. If aluminium
low threshold strips are used the
striker should be notched into
aluminium section to comply with
current legislation.

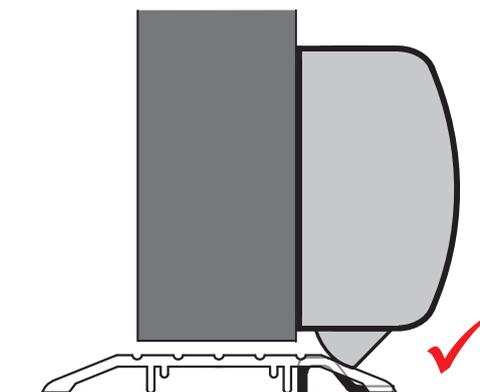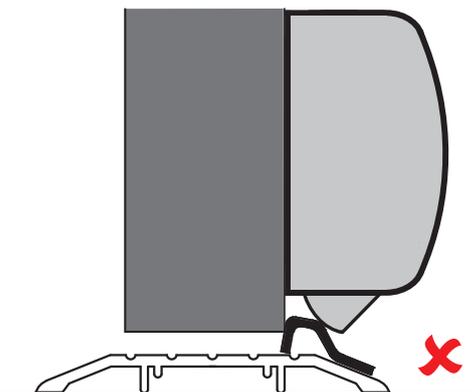

PH4304
Floor Striker

